

Bluetooth Pairing

- 1. Switch MODE to Bluetooth. The speaker will say, "Bluetooth mode". The LED Light will flash blue
- 2. Follow the Bluetooth instructions on your cell phone to pair with the speaker.
- When the speaker is discovered, tap on "ESB107" on your mobile phone. Wait for the device to connect.
- 4. The speaker will blip a warning tone when your device is connected. The LED Light will stop flashing.

Disconnect Bluetooth

When you disconnect from the speaker, it will blip again. The speaker's LED will flash blue when disconnected from Bluetooth.

Phone Controls

(In Bluetooth mode)

Answer Call/ End Call

Cancel Dial

Pair Bluetooth

To redial last number hold button for 2 seconds.

MicroSD Playback

To use MicroSD, switch the speaker MODE to MP3. Then press the multi-function button .

MicroSD/AUX Toggle/FM

Hold multi-function button for 2 seconds to switch between Micro SD card, AUX mode and FM

Line-In To use line-in, switch MODE to MP3. Then press the multi-function button.

Customer Support

Visit www.ultramax.co.uk to find out more about ULTRA MAX products. Contact our experienced technical sales team for more information or advice on any of our items.

Specifications

Stereo Bluetooth Stereo Bluetooth Speakers, supporting A2DP/AVRCP, allow you enjoy wireless HI-FI stereo music.

FM Radio function

To change FM channels use multi-function button. Use the mini USB cable provided as an antenna.